



IBM ThinkPad T42 Hard Drive Replacement

This guide shows how to remove the harddrive

Written By: Austin Kidd



INTRODUCTION


Replacing the Hard Drive



TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery

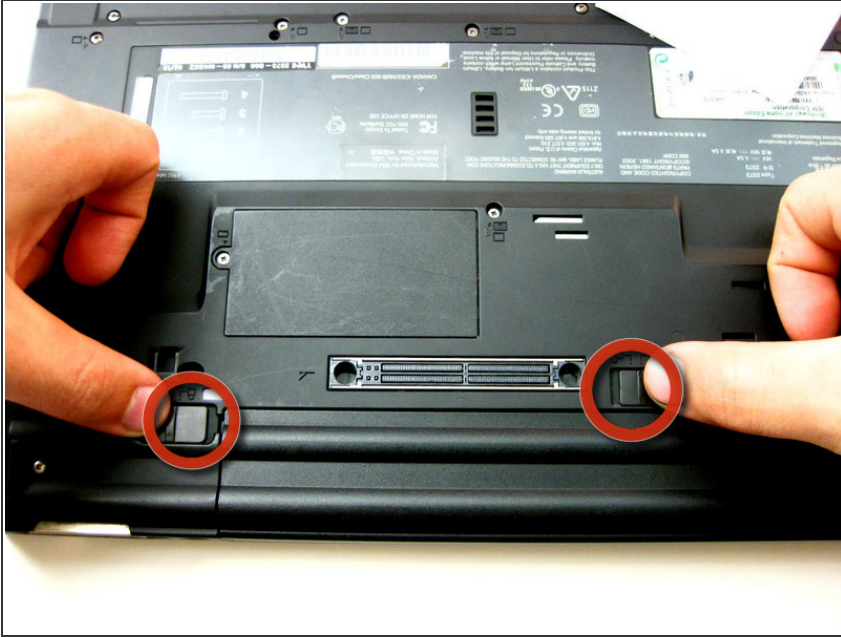

- Slide the 2 sliders on the under side of the laptop to the unlock position, as shown.

Step 2

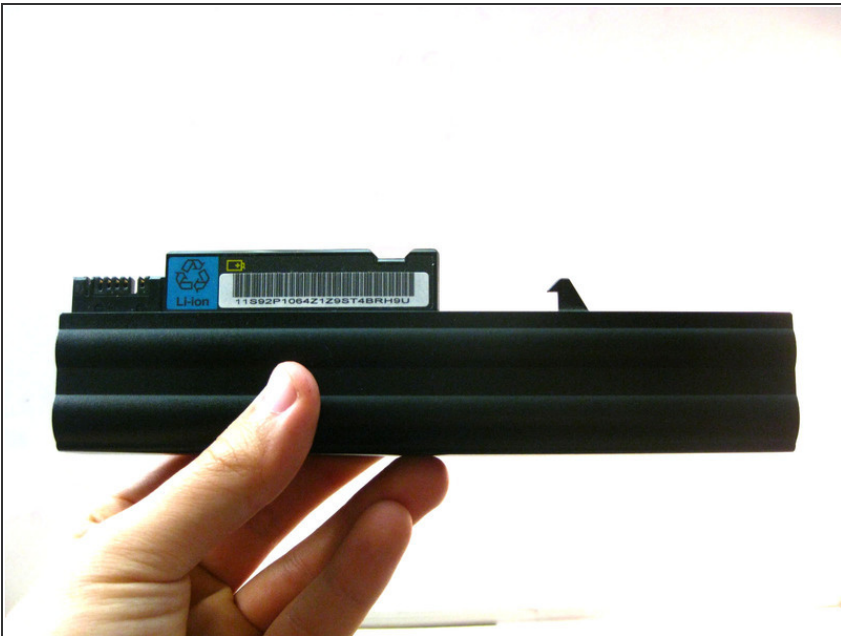

- Grasp the battery and pull it straight out - not at an angle.

Step 3 — Hard Drive



- Unscrew the screw holding the Hard Drive slot in place.

Step 4



- Pull the hard drive out with the help of pictured ridges. Cautiously maneuver it out - it might help to open the display slightly.

Step 5



- Pull Hard Drive out and replace with new one. Then screw back in.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-07 08:36:29 PM.